

USER Instructions for PP-WATTMETER-BUDGET

Features

This is a multifunction compact & light weight watt meter.

It has a battery voltage alarm function and can be directly installed in your model to measure real time current, voltage and watts.

It can also record the maximum current, and watts along with the minimum voltage.

Specifications

- Operating voltage range: 6.0-42V (2S - 10S)
- Current measuring range: 0.2A-100A
- Current accuracy: 0.2A
- Alarm voltage setting range: 6.6V-40V
- Alarm Voltage Setting step: 0.1V
- Size: 75mm x 30mm x 10mm
- Weight: 19g

LED State And Operating Instructions

·All LED's off The watt meter displays scrolling voltage, current, and power values.

·AMP LED on Displays real time current in Amps.

·WATT LED on Displays real time battery output power in Watts.

·VOLT LED on Displays real time battery voltage.

·PEAK LED on Displays scrolling maximum current, maximum Watts and minimum voltage.

·All LED's flashing at the same time. Indicates the users battery alarm.

Key Operation

·Press button briefly and the watt meter will scroll between the above states;

·Press button for more than 3 seconds in any state, then release the button when all LED light, the power meter goes into alarm voltage setting state and you can then set the alarm voltage from 6.6V - 40V with 0.1V step. If you miss the voltage you required keep repeatedly pressing the button until it scrolls round to the value you require.

